


About the Manifold

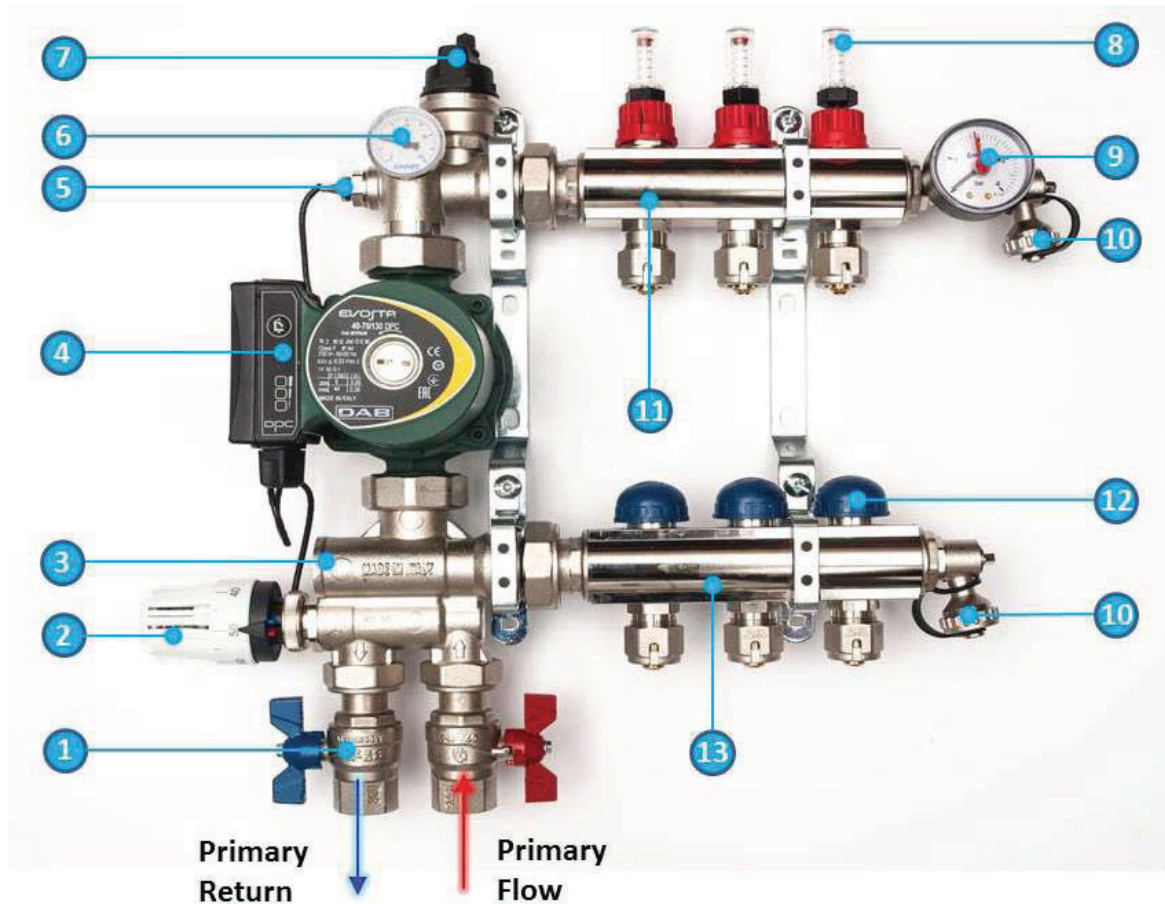

- | | | | |
|----|--|-----|---|
| 1. | Return Ball valve | 7. | Automatic Air vent |
| 2. | Mixing Valve Thermostatic head with remote sensor adjustable from 20°C to 70°C | 8. | Double Regulation Flowmeter |
| 3. | Flow increase Valve | 9. | 0 to 6 Bar pressure valve |
| 4. | DAB Evosta 40-70 / 130 DPC | 10. | Fill & drain Valves |
| 5. | Thermostatic sensor phial located in pocket | 11. | Flow Manifold Rail |
| 6. | Mixed floor temperature gauge, 0°C to 80°C | 12. | Blue Manual Caps (replaceable with Actuators) |
| | | 13. | Return Manifold Rail |

WWW.UKUNDERFLOORHEATING.CO.UK

To get the best underfloor heating deals, call us today

0114 247 7772 | 0800 232 1501 | Fax: 0114 247 3311

info@ukunderfloorheating.co.uk